


Aluminium Slat Privacy System

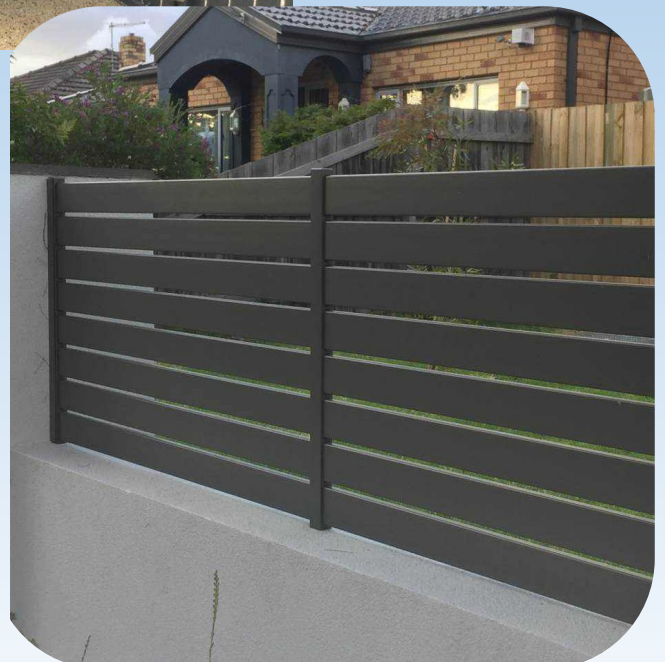

Product Information & Order Form

Aluminium Slat Privacy Systems

The AMGS Fencing range of Aluminium Slats is an innovative, easy-to-install privacy screening system offering the latest in architectural style. It offers a tough, long lasting, low maintenance fencing solution that suits a huge range of applications.

▶ Slats come in a range of profiles and lengths and can be easily cut down to size.

▶ Posts come with pre-cast channels allowing for easy positioning and fixing of slats.

▶ Custom Panels and Sliding, Double & Pedestrian Gates are also available on request.



Suitable Usage



Size Details



Tools Required


- Privacy Screening
- Boundary Fencing
- Side-of-House Security
- Bin Enclosures
- Architectural Fascias
- Pool Fencing
- Garden Fencing
- Window Screens
- Lockable Storage

- Slat Dimensions:
- 65 x 16mm @ 2400mm
- 65 x 16mm @ 3600mm
- 100 x 16mm @ 2400mm
- 100 x 16mm @ 3600mm
- Channel Posts:
- 50 x 1800mm - 2 Way
- 50 x 2400mm - 2 Way
- Slat Accessories:
- 52*52 post caps
- 60*60 Base plates
- 100 x 100 Base Plates

- Tape Measure
 - Stringline
 - Shovel/Post Hole Shovel
 - Cordless Battery Drill
 - Hex Head Drill Bit (5/16)
 - Spirit Level
 - Soft End Mallet
 - Slat gap spacers
- This can be anything that matches your desired slat spacing gap
- Concrete Mix



Available Colours

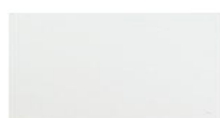

White



Maize-yellow



Coffee




Green



Silver



French grey




Dark grey



Black

Aluminium Slat Privacy Systems Examples

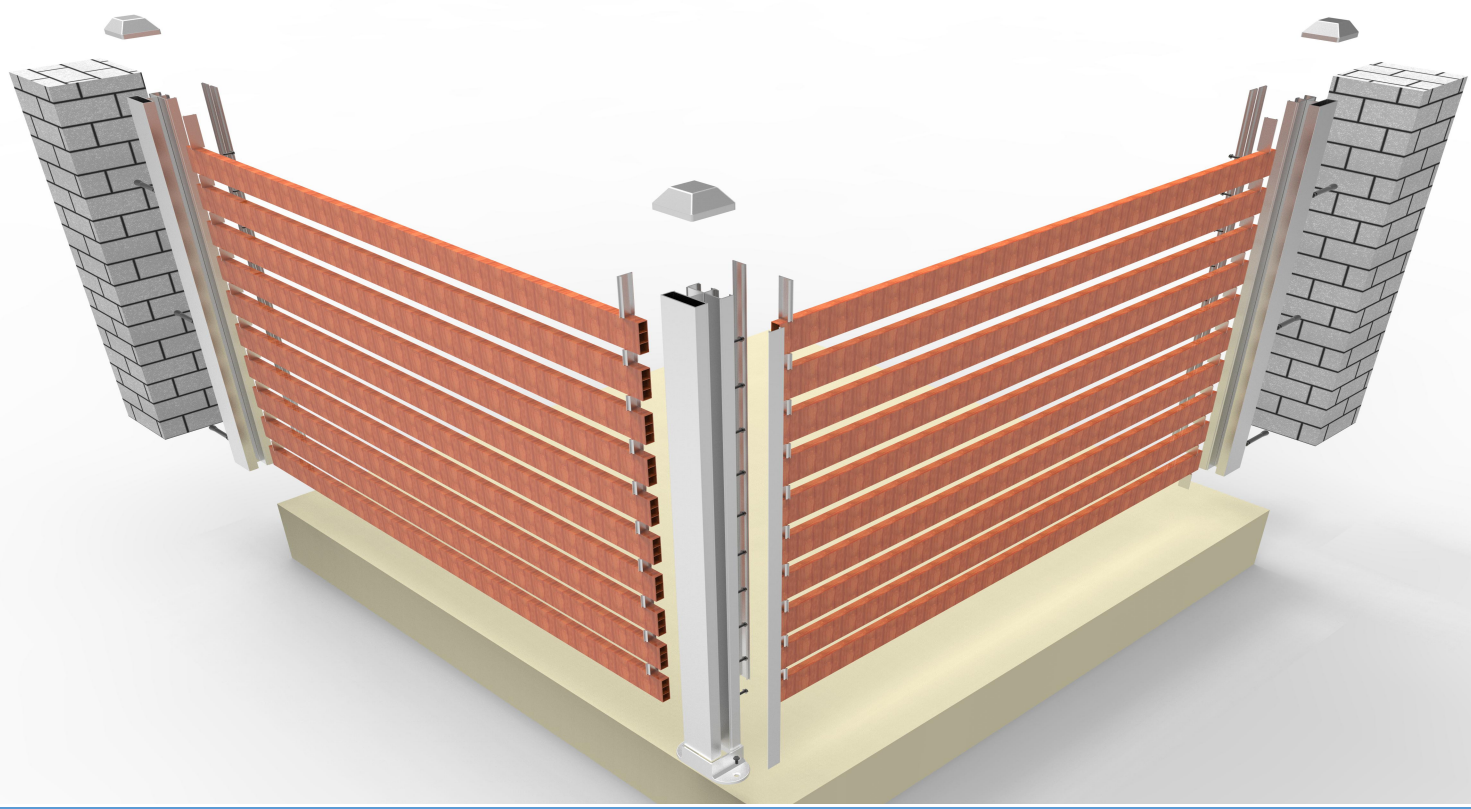

Material List


01	02	03	04	05	06	07
Mullion	Slats(60*15/100*15)	Mullion cover	Mullion cover	Hex head self tapping screw	slat gap spacer	post cap



D.I.Y options


Materials Checklist

A:Slats
B:Accessories
C:Gate
D:Gate hinge and lock set
E:Mullion

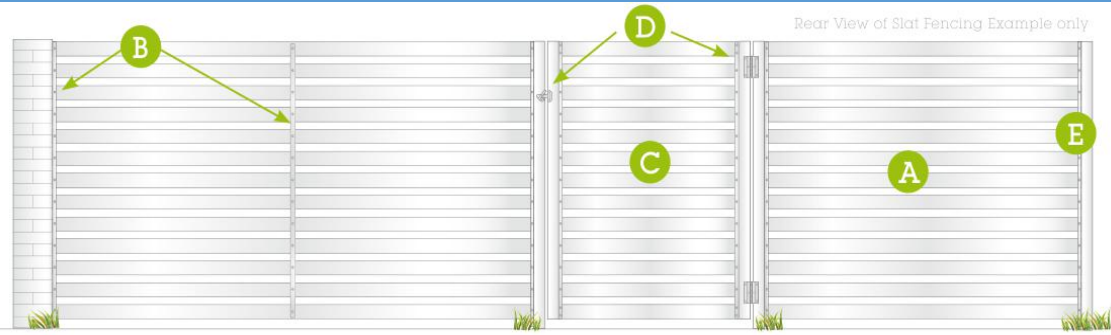

D.I.Y steps

Step1	<ul style="list-style-type: none"> Decide on fence position and measurements of panels & posts by creating a mud map of your site. Following the above Materials Checklist, calculate how many of each component you require.
Step2	<ul style="list-style-type: none"> Set Stringline along the desired line of the fence, close to the ground. Measure out all holes, starting with the gate post holes. Dig post holes along string line 600mm deep x 200mm in diameter. Posts will sit approx. 500mm into the post holes.
Step3	<ul style="list-style-type: none"> Ensure post centres are accurate (see below diagram for details) Ensure posts are flush and level along stringline then pour concrete around posts If you are using U Channel instead of posts, attach U channel to your surface using appropriate fixings.
Step4	<ul style="list-style-type: none"> Starting with the bottom slat, slide the slat down into the channel and screw off at your stringline using the screw ridge channel on the posts to guide your screw placement Place your slat gap spacers on top of this slat and repeat the process, keeping even spacing between slats until you reach your desired panel height.
Step5	<ul style="list-style-type: none"> Repeat the Panel Installation process to create your gate(s) using two screws for top and bottom slat, instead of just one. Attach hinge & latch components of Gate Kit to gate as per instructions. Attach hinge & latch components of Gate Kit to posts as per instructions.

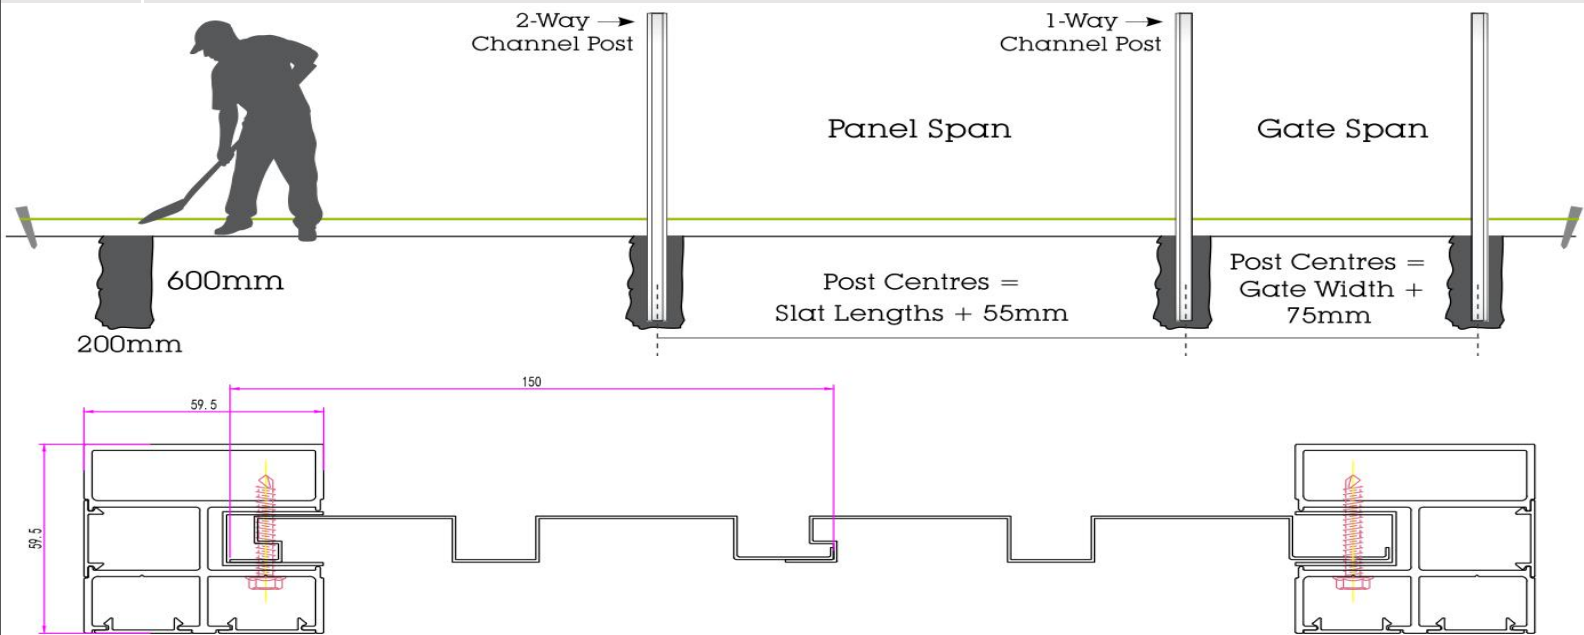

We have been constantly improving and innovating our products, and now our guardrails can also be fitted with 12mm single glass and colorbond panel.

You are welcome to submit valuable comments to enhance our products.

Thanks for your reading our products and if you want know more informations about this products, please contact our company sales or visit our website: www.amgsgz.com