



Formaldehyde



High strength



Easy to install



Scratch-resistant



Anti-moth



Eco-friendly



Waterproof



Textures












Skirting Board




SKIRTING BOARD


WHITE SERISE

White Series

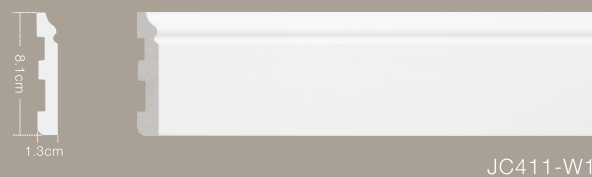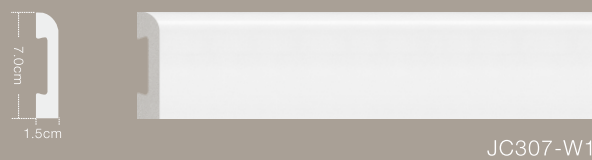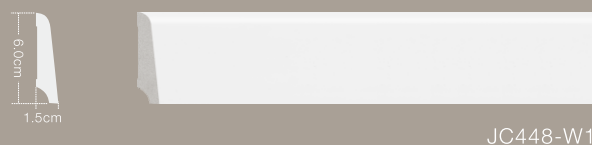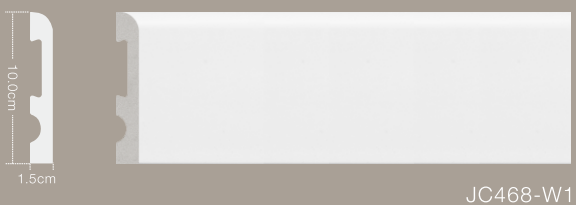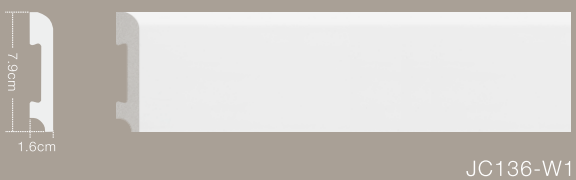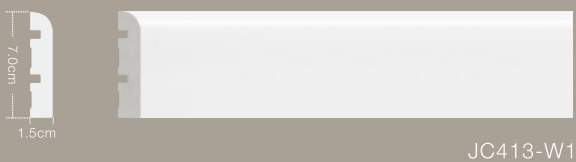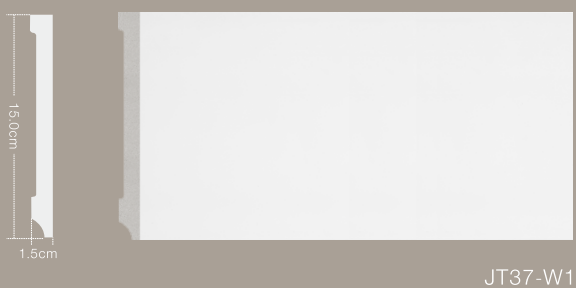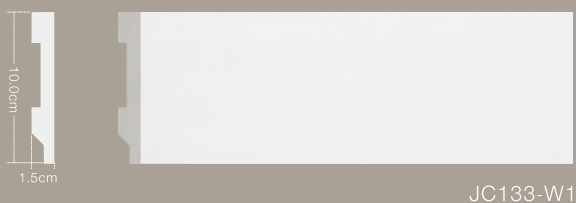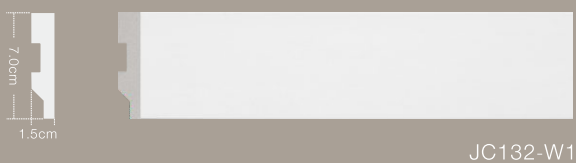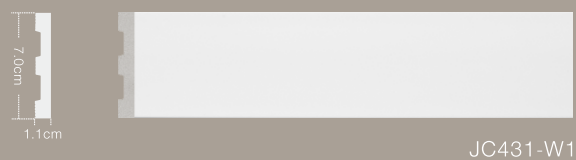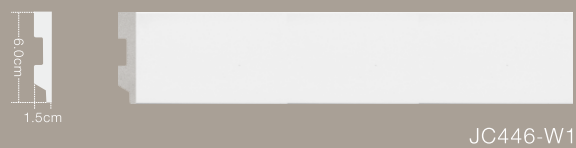





JC107-W1

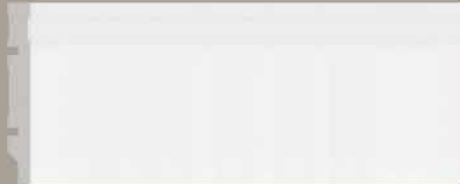

JC113-W1

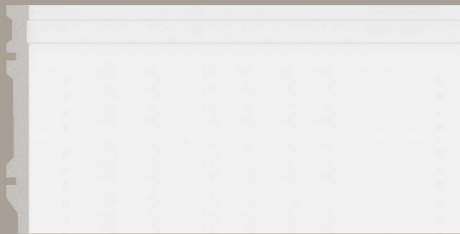


JC414-W1

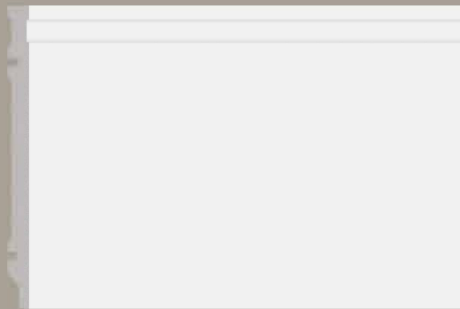


JC326-W1



JC437-W1

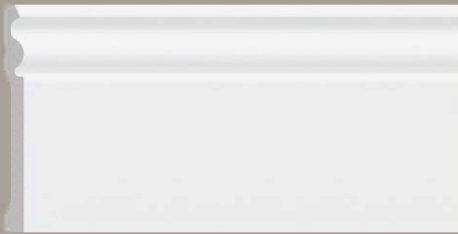

JC435-W1

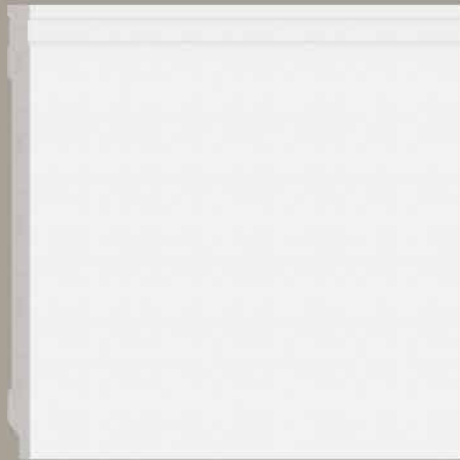

JC397-W1

Applications





SKIRTING BOARD

WOOD SERISE

Wood Series



JC581



JC581-7032



JC581-71151



JC581-1658EM




JC581-1678



JC581-696



JC581-1714

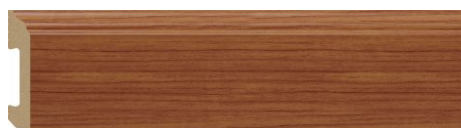

JC581-1153



JC581-1238EM



JC581-1187




JC581



JC581-7188



JC581-485

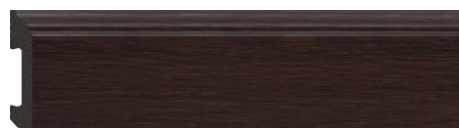

JC581-1578EM



JC307



JC307-610




JC307-7227




JC307-7055T



JC307-1269EM



JC307-7226T



JC307-730




JC307



JC307-15013T



JC307-1371T



JC307-1823



JC307-372



JC307-38047



JC307-4033T

Applications



Hot-selling Colors



-1449P



-1586



-71151



-1597




-7032



-W1312




-6832

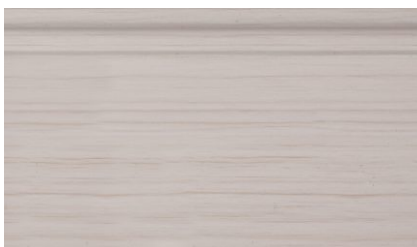

-11



-1902

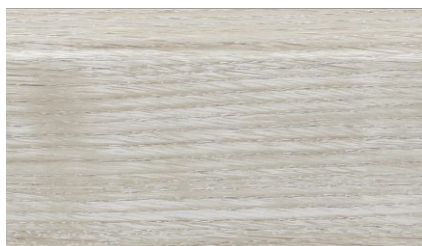

-1395



-1658EM



-950



-662



-30901



-133




-14133



-30931



-931

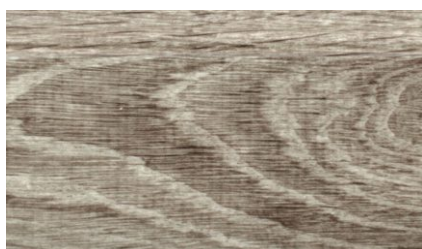

-1720



-71152



-7368



-886



-894



-1916



-6688



-819



-73461



-7041



-1308



-485



-7055




-610



-1154



-895

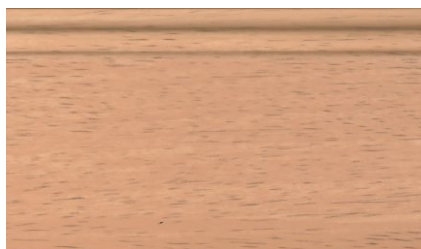


-547




-1401EM

Hot-selling Colors

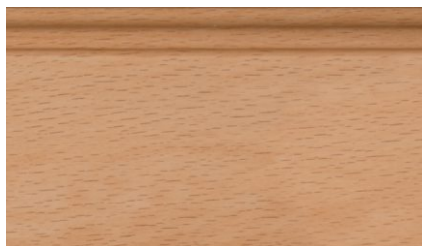

-7321

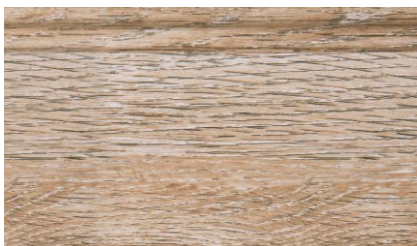

-882



-1134



-7088



-883



-787FI



-W80



-711



-1371EM



-696



-14159



-1603EM



-693



-896



-1714



-1331



-56



-1007EMT



-7226



-1467



-697



-898



-3090



-7371



-058



-7370



-1678



-1269EM



-30903



-1465



-1617P



-73481



-880



-7363



-1491



-1207

Hot-selling Colors



-10789



-1517



-1287EM




-23




-1745




-1153

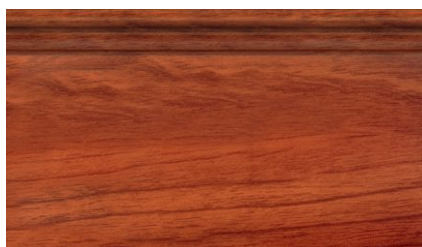

-323

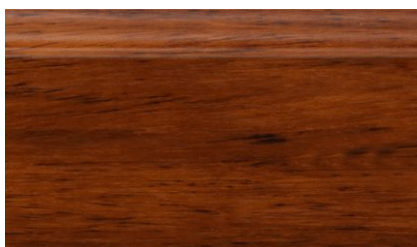

-1140EM

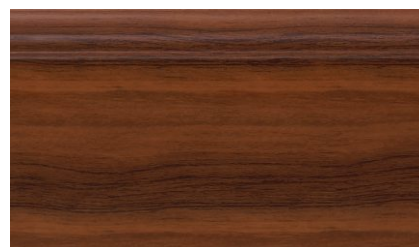

-730



-1791



-1238EM



-7095



-18T




-L73M



-884



-7085

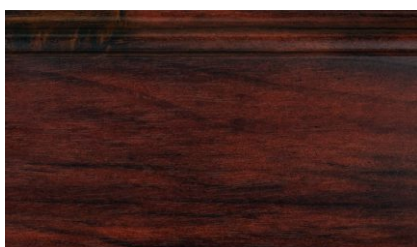

-372



-1284EM



-6684T



-1187




-20162



-1511P



-7364

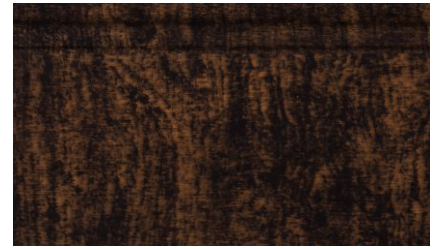

-1119P



-1684



-7188



-5518



-1578EM



-37047



-24



-087T



-06

Hot-selling Models

<6cm



JC358



JC367

6~9cm



JT67



JC719



JC535



JC368



JC131



JT58



JC493



JC369



JC518



JC307



JC158



JT82



JT222



JC755



JT70



JT136



JC13



JT59



JT60



JC526



JT39



JC482



JC196



JC731



JC581



JC411



JC761



JC534



JC533



JC713



JC525



JT89

9~12cm




JC192



JC193



JC122



JC12



JT62



JC157



JC756



JC527



JC422



JC437



JC343



JC423



JC366



JC730



JC407



JC559



JC494



JC515



JC720



JC410



JC560



JC583



JC584



JC600



JT70



JC200



JC406

Hot-selling Models

>15cm



JT57




JC68



JC409




JC435

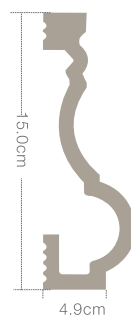

JC248




JC86

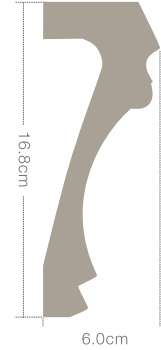


JC419

Floor T-Mould and Edge Trim




JC567-W1



JC569-W1



IN-YP30




IN-413T




IN-508




IN-507




IN-YG30

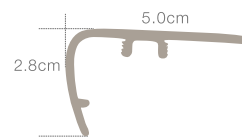

IN-5228



IN-08F

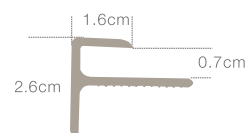

IN-08A



Floor T-Mould and Edge Trim




JF109-0105P




JF110-Z24




IN-2111

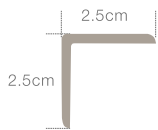

IN-2525

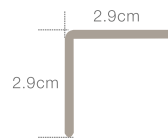

JF105-3101-P

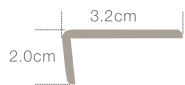

IN-3220

Installation

Double-sided Adhesive + Nail-free Glue



Apply double-sided adhesive on the top back of the skirting boards, with spacing of about 20 CM.



Apply construction adhesive at the spacing of the top double-sided adhesive and the bottom on the back of the skirting boards.




Install skirting boards, pat gently to fit it with the wall surface.



Use seam patching agent of the same color as the skirting boards to patch the seam.

Installation

Buckle Installation Method

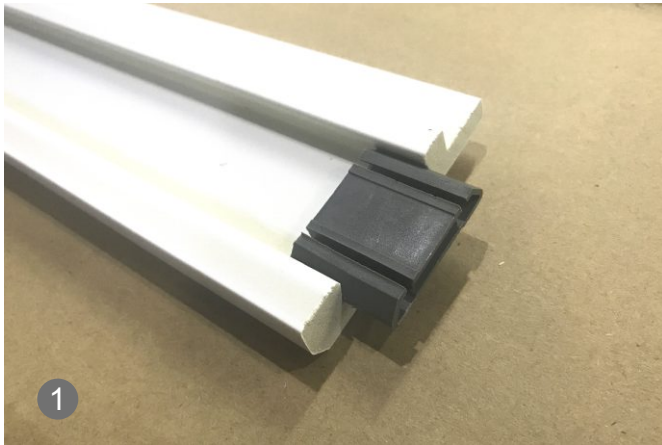

Can install skirting boards with Intco's supporting plastic clasp, which is very convenient.



Based on the skirting boards, mark out clasp position to facilitate nailing, with spacing of about 40cm.



Use special tool to fix nail (pneumatic nail gun is recommended), avoid water and power cable pipelines.



Fit the skirting boards to the clasp in turn, pat with force to ensure complete connection.

Tools & Accesories



■ Cutting Machine




■ Steam Nailer



Nail Gun




■ Strong nail free glue

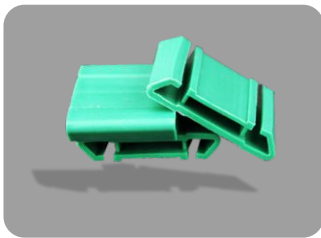

■ Plastic buckle



■ External and Internal Plug

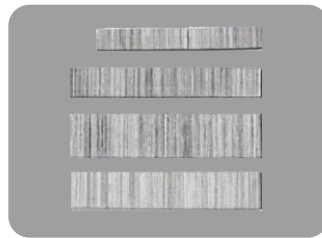


■ Steam nail



Clear cloth




■ Masking tape

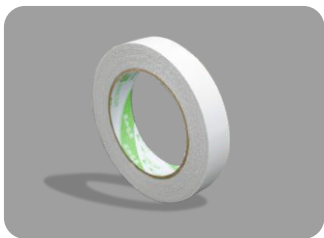

■ Double-sided foam tape




■ Tape measure

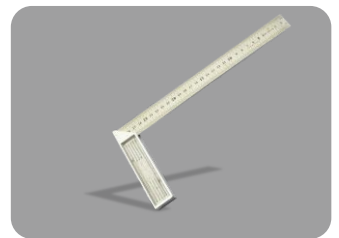

■ L-square

Demonstration of inner / outer corner, flush joint, plug:

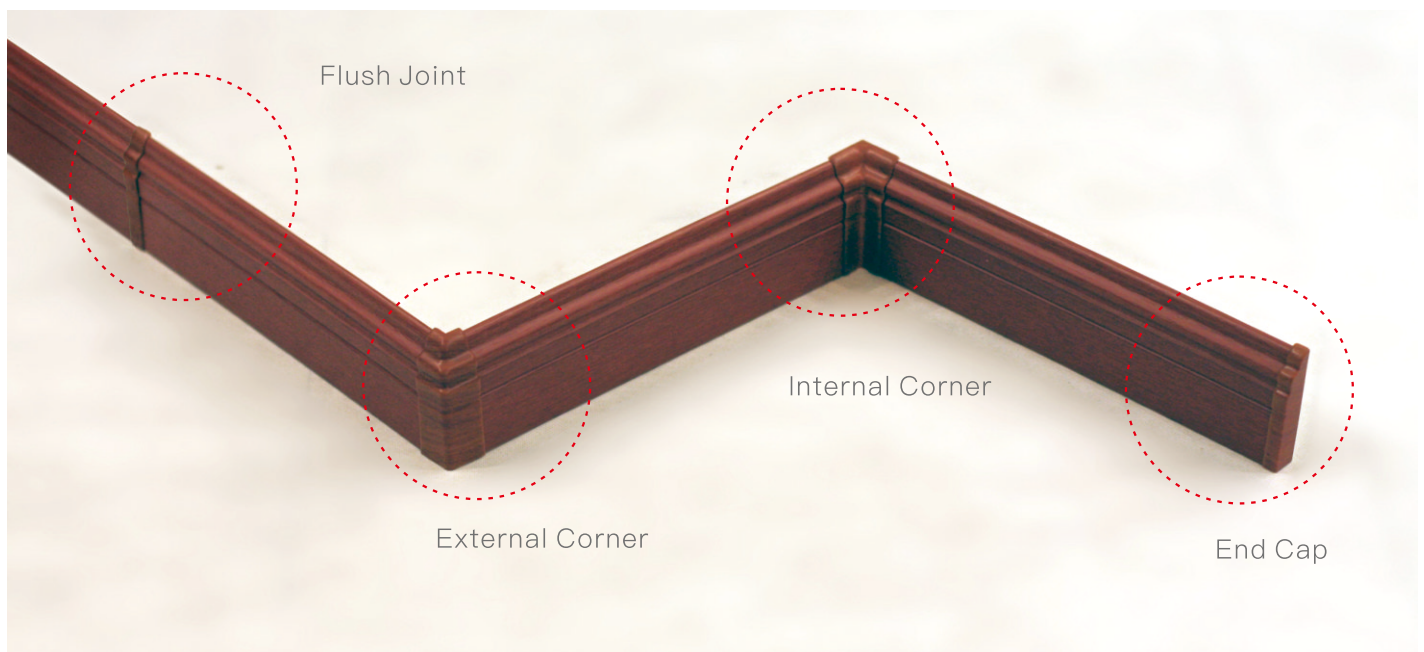


Product Features




Formaldehyde



Waterproof

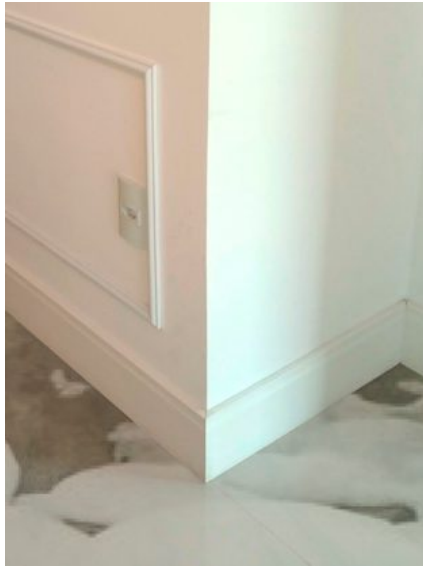

Flexible

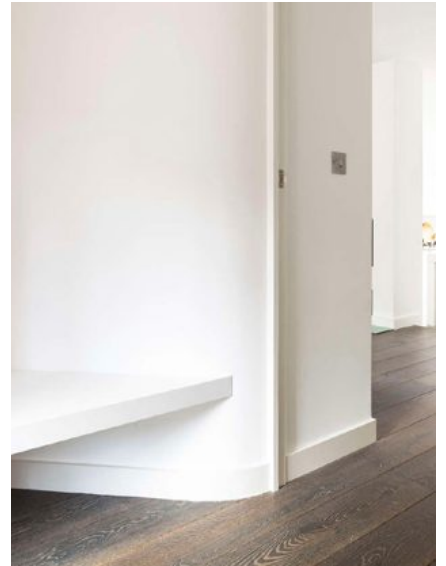


Anti-moth



Scratch-resistant



Easy to Install

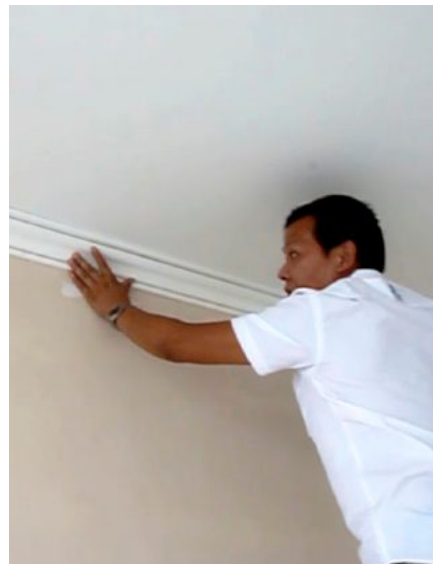

Qualification


Intco's reputation comes from trust of customers and the society



ISO9001




ISO14001

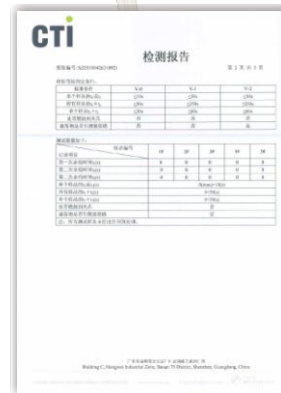


Fire Retardant Test Report




Resistance Test Report

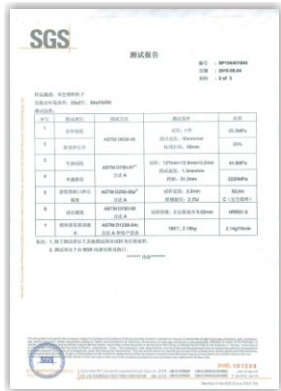


Impact Modified HIPS Performance Test Report

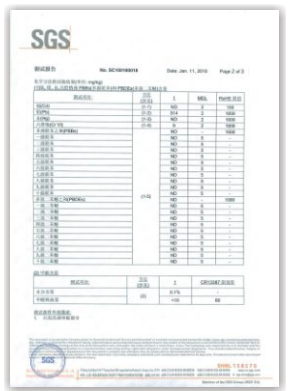

Heavy Metal Content Test Report

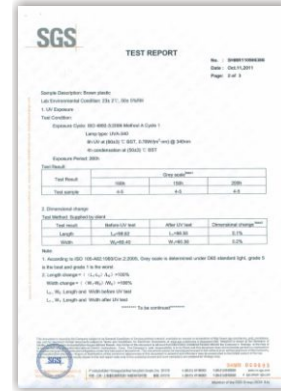

Anti-aging Test Report

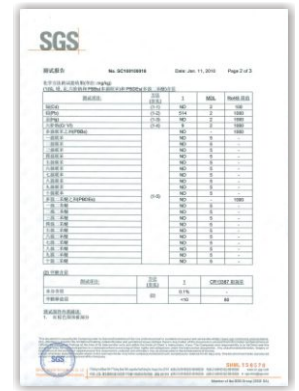

Formaldehyde-free Test Report




Foam Particle Inspection Report



Fire Retardant Test Ct Inspection Report



Lead Content Test Report

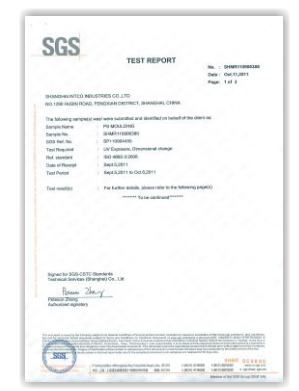

Anti UV